



# Download

[Rittal CMC III Processing Unit Installation Manual And Short User's Manual Download](#)

## 6.7 Manual changes to the "access.cmc3" file

Alternatively, the access authorisation settings can also be made directly in the "access.cmc3" file. This file is created automatically in the "upload" directory of the CMC III Processing Unit when it is started for the first time.



### Note:

If the "access.cmc3" file is removed from the folder, access is only then possible using the three predefined access codes "1001", "1002" and "1003". All other access authorisations have to initially be added again to a newly created file.

### 6.7.1 Downloading the file



### Note:

The following descriptions assume that you establish an (S)FTP connection using the "FileZilla" program. If another program is used, the file may have to be downloaded and uploaded in a different way.

- First establish an FTP or SFTP connection to the CMC III Processing Unit from a PC (see the assembly and operating instructions for the CMC III Processing Unit).
- In the left-hand subwindow (PC), switch to the folder where you wish to locally save the "access.cmc3" file.
- Switch to the "upload" folder in the right-hand subwindow (CMC III PU).
- Right-click the "access.cmc3" file and select the "Download" action.
- Disconnect the (S)FTP connection between the PC and CMC III PU.

If there is no "access.cmc3" file in the "upload" directory, this has to be created first.

- When using a coded lock: Input any sequence of numbers on the coded lock and confirm using the "Enter" key. The file is now generated in the "upload" folder.
- When using a transponder reader: Hold any transponder card in front of the reader unit. The file is now generated in the "upload" folder.
- Establish an (S)FTP connection between the PC and CMC III PU again and download the file.
- Disconnect the (S)FTP connection between the PC and CMC III PU again.

### 6.7.2 Editing the file

The file can now be edited using a text editor. Rittal recommends using "Notepad++" for this instead of the standard "Notepad" editor installed under Windows. This is available online as freeware.

```

1 #----- Access-File CMC-III -----
2 # Name      : Name of the Unit
3 # Location  : Location of the Unit
4 # Contact   : Contact Person
5 # IPv4-Address : 192.168.10.190
6 # IPv6-Address 1 :
7 # IPv6-Address 2 :
8 # IPv6-Addr. Auto 1 :
9 # IPv6-Addr. Local: fe80::2d0:95ef:fe25:f97b
10
11 4-Eyes:30
12 Key:1001: User:; Information:; Handle:
13 Key:1002: User:; Information:; Handle:
14 Key:1003: User:; Information:; Handle:
15 Crd:; User:; Information:; Handle:
16

```

Fig. 11: "access.cmc3" file in Notepad++

The file is structured as follows:

- Lines starting with a "#" are comment lines. These contain basic information on the CMC III Processing Unit.
- Lines with "Key" or "Crd" as first entry contain the authorised access codes if a numeric coded lock is used, or the authorised card numbers of the transponder cards if a transponder reader is used (see section 6.5.1 "Specification of the access authorisations").
- The line with "4-Eyes" as first entry contains the time interval for the registration in the four-eyes principle (see section 6.5.2 "Four-eyes principle").
- Lines with "Keypad" as first entry contain the assignment of reader units to individual access modules (see section 6.5.3 "Assignment of reader units to access modules").

### Access codes and transponder cards

The lines for the access codes and the transponder cards contain the following entries:

The individual lines contain the following entries:

Parameter	Explanation
Key	Access code containing up to eight digits for a coded lock for authorised access.
Crd	Card number of a transponder card for authorised access.
User	User to be entered in the CMC III Processing Unit logfile when the coded lock is opened with the associated access code or on opening with the associated transponder card. This user has to exist in the CMC III PU.
Information	Specific additional information for the access. This text is also added for the user in the CMC III Processing Unit logfile.

Tab. 14: Entries for access codes and transponder cards

---

[Rittal CMC III Processing Unit Installation Manual And Short User's Manual Download](#)



**Download**

---

Thank you for choosing our CMC III coded lock (referred to hereafter as "coded lock")! We wish ... Operating the CMC III Processing Unit from the website . ... 6.5.1 Downloading the file . ... Installation Guide and Short User's Guide. – CMC III ... 6.7.1 Downloading the file . ... Installation Guide and Short User's Guide for the connected accessories ... operating instructions for the CMC III Processing Unit).. Central Processing Unit ... connection with users and stabilise work of their servers. ... paper describes how to install and configure Zabbix 3.0 for required purposes ... Network monitoring can be divided into three parts: Manual check, Scheduled ... Rittal CMC III is a control system for monitoring different types of sensors,.. Rittal Limited CMC III Accessories 7030200 CMCIII CAN BUS UNIT ... Function principle, Settings can be made via the CMC III Processing Unit ... Supply includes, CMC III CAN bus access Installation and Short User's Guide Assembly parts for ... to many great features including trade prices, downloads and estimating tools.. Rittal CMC III Pdf User Manuals. View online or download Rittal CMC III Installation Manual And Short User's Manual.. Downloaded from Arrow.com. Page 2. CMC III sensors – DK 7030.111 created: 10.06.2018 on www.rittal.com/com-en ... CAN bus interface and can be connected to Processing Unit III directly in the bus. ... Installation and Short User's Guide.. created : 01.10.2014 on www.rittal.com/com-en. Product ... With the CMC III CAN bus unit, the active PSM modules and the PCU 19" switchable socket ... Installation and Short User's Guide ... CMC III Processing Unit Compact: 1 ... Downloads.. 19 Jan 2012 ... 8.11.4 Downloading the log file to a computer . .... the CMC III Processing Unit and the CMC III Process- ... Installation and Short User's Guide.. View and Download Rittal CMC III Processing Unit installation manual and short user's manual online. CMC III Processing Unit Control Unit pdf manual .... CMC III – Monitoring system ... with a CAN bus interface and can be connected to Processing Unit III directly in the bus. Sensors ... Installation and Short User's Guide ... Rittal worldwide. Imprint / Legals. Sitemap. Downloaded from Arrow.com.. Rittal CMC III Processing Unit Pdf User Manuals. View online or download Rittal CMC III Processing Unit Installation Manual And Short User's Manual.. View and Download Rittal CMC III installation manual and short user's manual online ... der CMC III PU oder der CMC III CAN-Bus Unit angeschlossen werden.. Rittal CMC III Processing Unit Installation Manual And Short User's Manual 18 Pages bit.ly/2yO8bGh & nbs.. Thank you for choosing our CMC III ISDN unit (referred .... Installation Guide and Short User's Guide ... operating instructions for the CMC III Processing Unit).. CMC III Processing Unit and the CMC III Processing ... Installation and Short User's Guide. 1.5 Area of ..... the driver can be downloaded from the Internet page.. Follow the user information found in these instructions and on the .... Thermal Guidelines for Data Processing ... superordinate control unit (Basic CMC), a fan module, a .... 15: Redundant cooling with three LCP Racks .... generally be provided in order to compensate short- ..... download directory, in which measurements.. Rittal System Catalogue 35/Software & services .... mance enhancements among users. ... consuming process of calculating climate control ... DIN EN 14 511 for enclosure cooling units. ... Download RiDiag III for free at www.rittal.com ... installation ... Benefits: ■ Calculate the heat loss, either mathematically or manually.. tions that cover everything from manual tools to fully automated plant. ... This is because our innovations are clearly designed with user benefits in ... cates are available for download .... nate the need for installing separate door- ..... CMC III Processing Units, see Catalogue 34, ..... Rated short-time withstand current Icw up.. Rittal CMC III Processing Unit Compact Pdf User Manuals. View online or download Rittal CMC III Processing Unit Compact Installation Manual And Short User's .... Document Includes User Manual UserMan.book. ... if not installed and used in accordance with the instructions as provided in the .... to Processing Unit II 4.1 Housing The CMC-TC Wireless I/O-Unit is contained in its ..... operating manuals and updates of the Rittal CMC-TC can be downloaded .... Short Term Confidential, No. 09d653b45f